
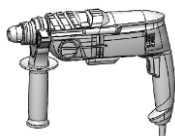





Use the necessary safety equipment



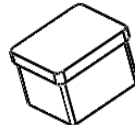




Required Equipment



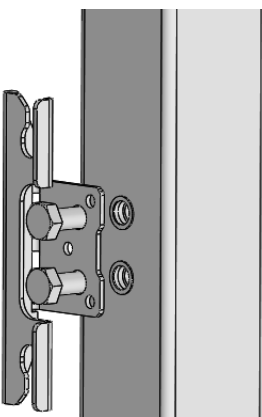

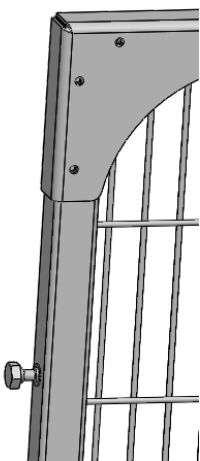
				
13mm, 17mm	Φ12			5mm

PANEL ASSEMBLY

Panel Assembly Kit

				
M8x15 x8	Roldory M8x20 x4	x1	Bracket x4	M10

Assembly Steps

 M8x15  Bracket		1	 Roldory M8x20		2
--	---	----------	--	--	----------

